Manualslib.com - The Global Manuals Library

JVC LT-32C675D QUICK START MANUAL

Table of Contents

What’s in the Box?
Operating Your Remote Control
Fitting the Stand Neck and Base Together
Fitting the Stand to the TV
Installing the Base Stand
Connecting the Aerial and Turning on the TV
Getting Started
Privacy Settings
Connecting to the Internet - Wired, Wireless or Using the WPS Button
WIRED Connection
WIRELESS Connection
WPS Connection
Tuning in Your TV
Other ManualsLib Projects

JVC

Quick Start Guide

32" LED Smart HD TV
with built-in DVD player
LT-32C675(D) / LT-32C676(D)

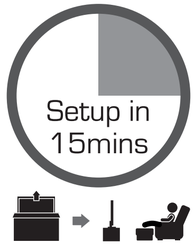

FreeviewPlay

HDTV DVD VIDEO HDMI HIGH-DEFINITION MULTIMEDIA INTERFACE

DOLBY AUDIO™

dts-HD dts TruSurround

Thank you for purchasing your new JVC TV.

Your new TV incorporates the latest technology to enhance your viewing experience. We would suggest that you allow about 15 mins for initial setup.

Please follow this guide for a successful first time installation.

The latest eco-friendly power-saving technology will switch off the TV if it is left on and idle for 4 hours. Please refer to "Auto Standby" under the "Time Settings" section of the instruction manual for more detail.

1 What's in the Box?

Remove all packaging from the unit. Retain the packaging. If you dispose of it please do so according to any local regulations.

- ☑ TV
- ☑ TV Stand
- ☑ Remote Control/ AAA Batteries x2
- ☑ Screws x 6
- ☑ Instruction Manual
- ☑ Quick Start Guide

Please inspect your TV for damage after unpacking. If you do notice any damage please consult your dealer.

2 Operating Your Remote Control

1. Slide open the battery compartment on the back of the remote control.
2. Insert two AAA size batteries. Make sure to match the (+) and (-) ends of the batteries with the (+) and (-) ends indicated in the battery compartment.
3. Slide the battery compartment cover back into place. Make sure it clicks into place.

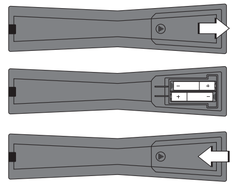

3 Installing the Base Stand

Fitting the Stand Neck and Base Together

1. Fit the neck onto the base.
2. Using 2 of the supplied screws, screw the neck to the base.

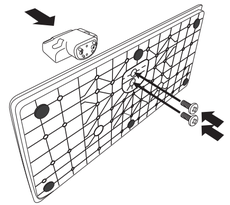

Fitting the Stand to the TV

3. Ensure the TV is switched off and not connected to the mains power supply.
4. Lay the TV down on a flat surface ideally on the edge of a table so the base of the TV slightly overhangs the edge of the table, with the back side facing up. Please make sure a soft cushioned material (such as a dry bath towel or thick piece of foam) is placed beneath the screen.
5. Slide the stand under the lip, the neck will fit snugly over the screw holes. Then screw the stand to the TV using the 4 screws supplied.

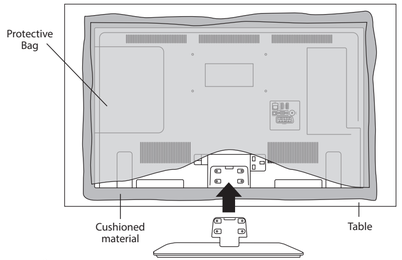

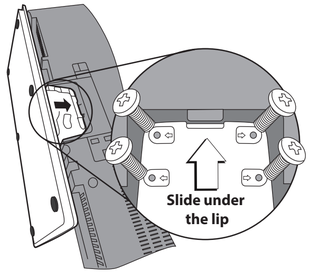

The LCD display is very fragile, and must be protected at all times when installing and removing the base stand. Be sure that no hard or sharp object, or anything that could scratch or damage the LCD display, comes into contact with it. DO NOT exert pressure on the front of the TV at any time because the screen could crack.

4 Connecting the Aerial and Turning on the TV

1. Connect one end of the RF coaxial cable to the aerial socket on the wall and the other end of the cable to the **ANT** socket on the back of your TV.
2. Plug the TV into a mains socket and switch on at the mains.
3. In standby mode, press the ⏻ button on the remote control to turn the TV on. The LED indicator will flash for a few seconds then the TV will switch on.

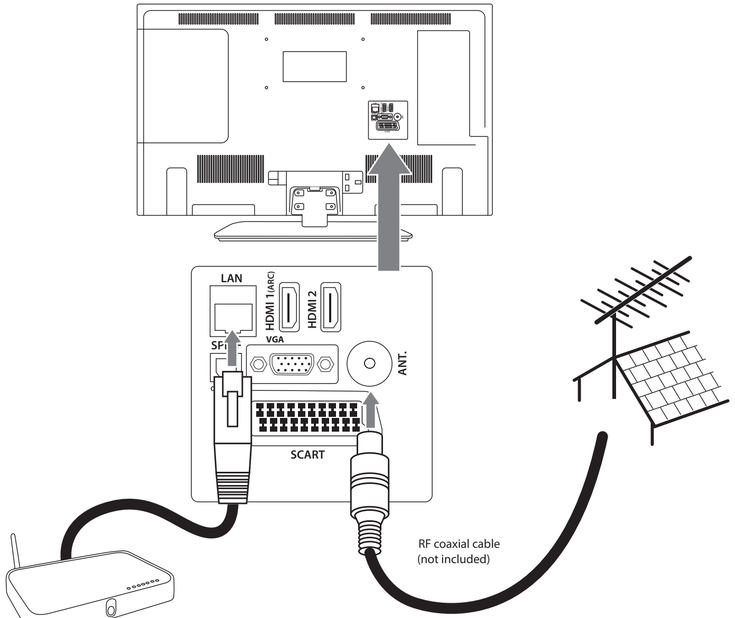

Optional

If you want to connect to the internet via a wired connection then connect your ethernet cable to the **LAN** socket.

- Do not connect the TV to the mains supply until you have completed all the connections.
- Always disconnect the TV from the mains socket when not in use for a long period of time.
- The ⏻ button on the remote control is only used for switching the TV into standby, it does not disconnect the TV from the mains power. To completely disconnect the mains power, please remove the mains plug from the mains socket.

5 Getting Started

1. The first time you turn the TV on, it will go straight into the **First Time Installation** menu. Please ensure the aerial is plugged in. Press the ▲▼ buttons to highlight your language then press **OK**.

All of the setting on 'First time installations' menu are pre set for the majority of customers in the UK, if you wish you can change the setting by selecting each setting and pressing the ◀▶ buttons.

If you View TV Through a Set Top Box

If you have attached a Set top box such as **Sky/Virgin** or **BT** via a HDMI cable select Digital Aerial to **NO**. This will mean your TV will not try to tune any channels in. To view your set top box press the **SOURCE** button and select the HDMI socket you have attached your set top box to.

2. Confirm these settings by pressing **OK**.

3. Press the ◀▶ buttons to highlight Home Mode then press **OK**.

Privacy Settings

Before you are able to connect to the internet and use the smart features of your TV, you **MUST** make sure that some Privacy Settings are activated.

To use Smart functions the minimum settings that you will need to activate are **Portal and Applications** and **Internet connection** . For Red Button services you must activate **HbbTV**.

By activating these settings you are allowing the TV Manufacturer to store data to help improve the performance and user experience of your TV.

Each setting has a description, if you press the P ^ / v button when the setting is highlighted you will be able to scroll up and down the text to read the description.

To Accept ALL (recommended)

1. To accept all the setting press the **OK** button. All of the sliders will slide across to the right and change to Green.

2. Press **OK** again to continue with your installation.

Press **OK** to Accept All

Select Individual Settings

If you don't want to accept all the setting you can choose to activate settings individually.

1. First make sure Accept All is deactivated, the slider should be on the left and red.

2. Press the ▼ button to highlight your desired setting then press the ▶ to activate it.

3. Press the **OK** button to confirm your settings, a list will appear highlighting the settings that you haven't accepted. Select YES to continue.

Reminder of setting not selected

4. To access all the features of your Smart TV you must be connected to the internet. If you do not wish to set up your network connection you can skip this section by selecting NO, however we recommend you set up your network connection now.

5. Select Yes and Press **OK**.

First time installation
Network setup allows you to access content on your home network and the Internet. Enjoy online video, music, games, news and more provided by Smart TV portal.
Do you want to do Network settings now?
Yes
No

To enjoy Freeview Play your TV must be connected to the internet.

6 Connecting to the Internet - Wired, Wireless or using the WPS button

To access all the features of your Smart TV you must be connected to the internet. If you do not wish to set up your network connection you can skip this section by pressing ▶▶ , however we recommend you set up your network connection now.

WIRED Connection

- If you have connected your ethernet cable to the **LAN** socket on the back of your TV press the ◀▶ buttons to select WIRED DEVICE. When Network says CONNECTED press **OK**.

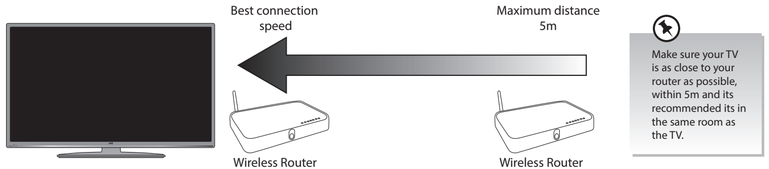

Make sure your TV is as close to your router as possible, within 5m and its recommended its in the same room as the TV.

WIRELESS Connection

You can connect using a wireless connection via your router.

1. Press the ◀▶ buttons to select WIRELESS DEVICE. Wait a few seconds and a list of all wireless networks will be displayed.

2. Press the ▲▼ buttons to select your wireless network then press **OK**.

3. You now need to enter your password, a keyboard will appear. Press the ◀▶▲▼ buttons to select a letter/number/symbol and press **OK** to enter each one. Once you have typed your password highlight OK and press **OK**. The network will now show Connected.

4. Press the **OK** button to continue.

WPS Connection

Rather than having to enter your Wireless password, you can select the WPS option. This will allow you to connect to your router without a password once the WPS button is pressed on your router.

1. Select WIRELESS DEVICE, when you see list of wireless networks press the **BACK** button.

2. Press the ▼ button to select 'Press WPS on your wifi router' then press **OK**. Now press the WPS button on your router and your TV will connect to your router, without the use of a password.

7 Tuning in Your TV

Your TV will now start automatic channel scan. It will tune in all available TV channels.

Choose Region (UK only)

During tuning, your TV may have received signals from more than one transmitter. If this has occurred the Choose Region screen will be displayed. This will enable you to select the correct regional transmission for the local news service that you require.

1. Press the ▼ button to highlight **Primary region**, then press the ◀▶ buttons to select your Primary Region e.g. England.

2. Press the ▼ button to highlight **Secondary region**, then press the ◀▶ buttons to select your Secondary Region e.g. London.

3. Press the ▼ button to highlight **Tertiary region**, then press the ◀▶ buttons to select your Tertiary Region e.g. Greater London.

4. Press the ▼ button to highlight Save then press **OK**.

5. The Scan statistics screen will appear, showing you the amount of TV and radio stations that have been tuned in. Press **OK** to exit this screen.

6. The Edit Channel list will appear, press the **EXIT** button to remove this. Your TV is now fully tuned in and ready to use.

Need More Help!

If you need more help setting up your TV then please call:

UK: 0344 561 1234
Ireland: 1890 818 575

Lines are open 24/7

(QSG-LT-32C675/676(D)-180928V1)

Other ManualsLib Projects

www.manualslib.com

www.manualslib.de

www.manualslib.es

www.manualslib.fr

www.manualslib.nl

www.manualslib.mx

www.manualslib.tech 30+ Languages